

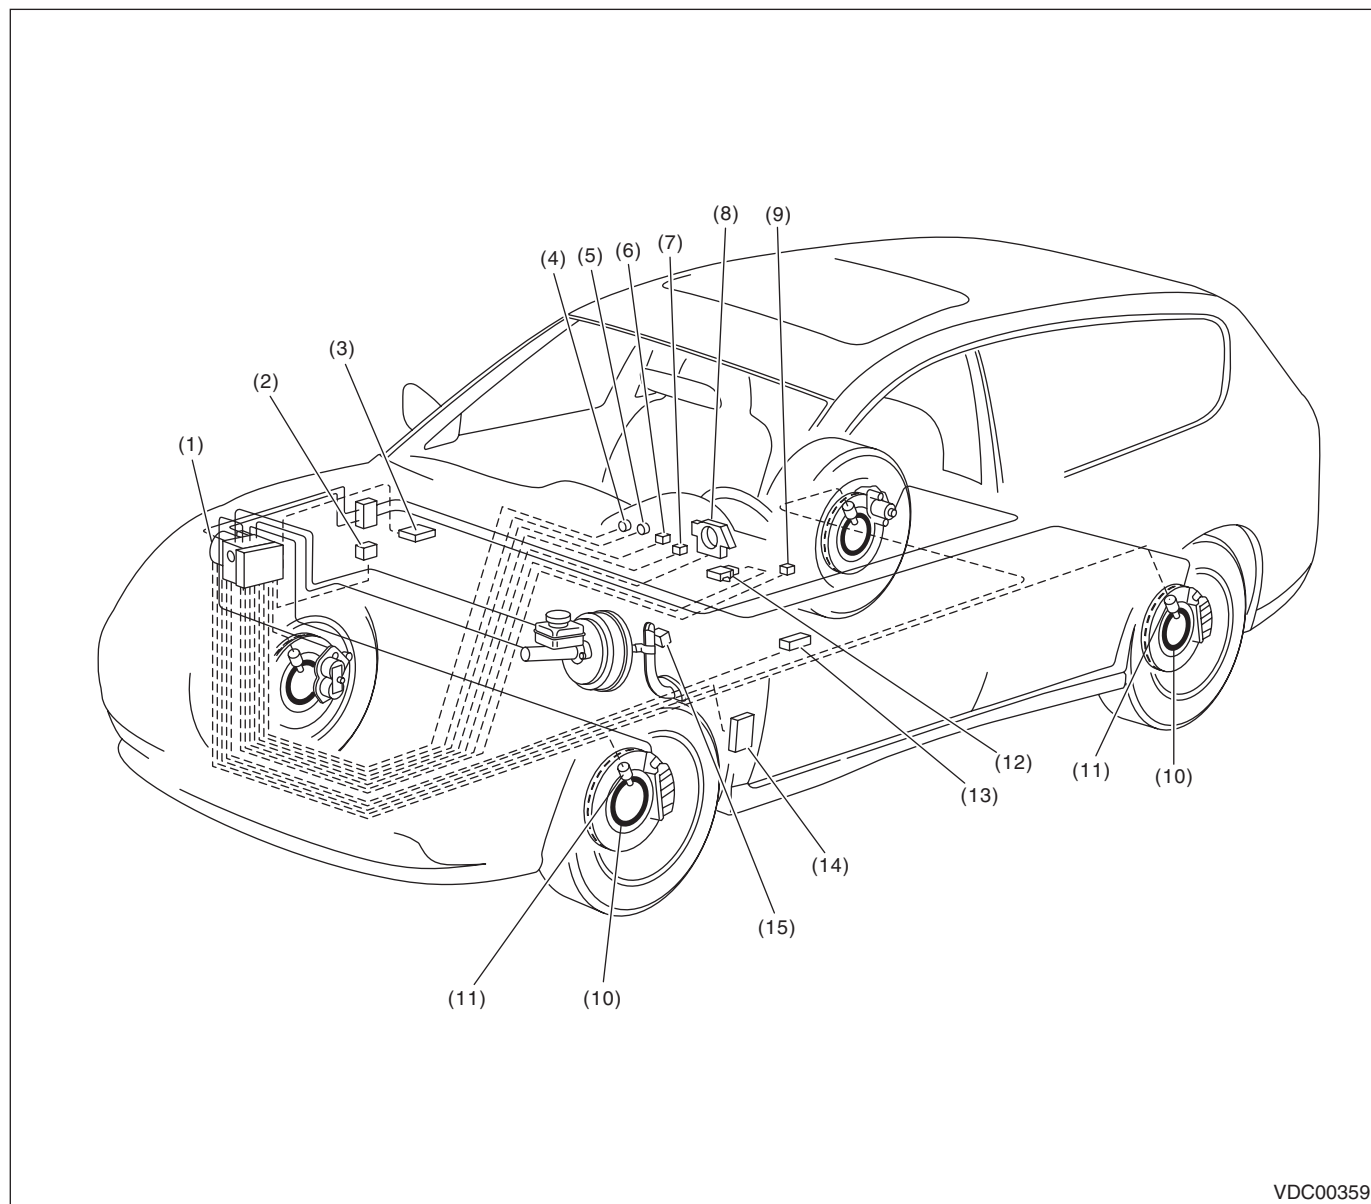
Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

1. VDC CONTROL MODULE IDENTIFICATION MARK W2










VDC00359

- | | | |
|---|---|--|
| (1) VDC control module & hydraulic control unit (VDCCM&H/U) | (6) VDC indicator light | (11) ABS wheel speed sensor |
| (2) Relay box | (7) VDC warning light and TCS OFF indicator light | (12) Yaw rate & lateral G sensor |
| (3) Engine control module (ECM) | (8) Steering angle sensor | (13) Data link connector |
| (4) Brake warning light (EBD warning light) | (9) TCS OFF switch | (14) Transmission control module (TCM) |
| (5) ABS warning light | (10) Magnetic encoder | (15) Stop light switch |

Electrical Component Location

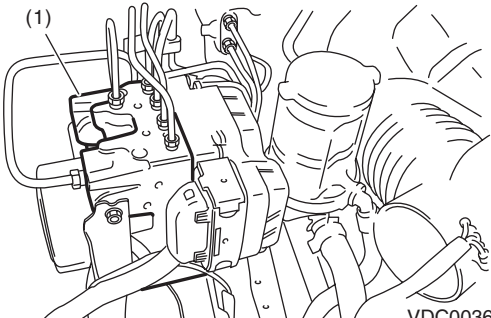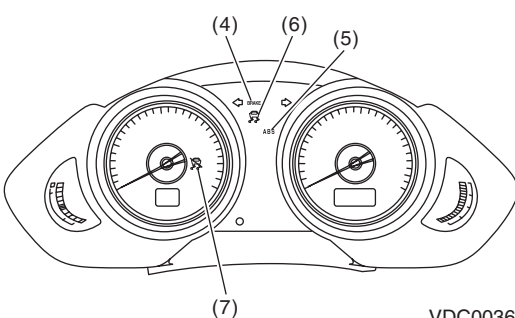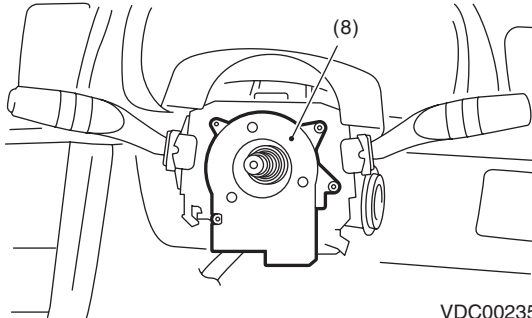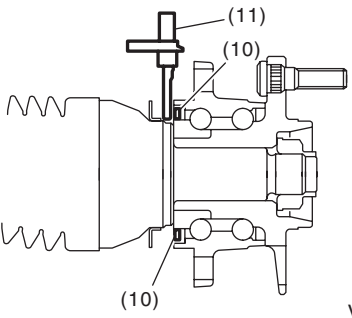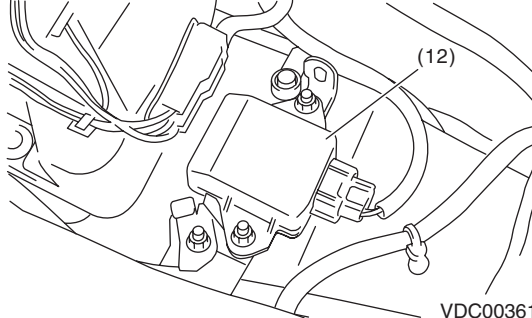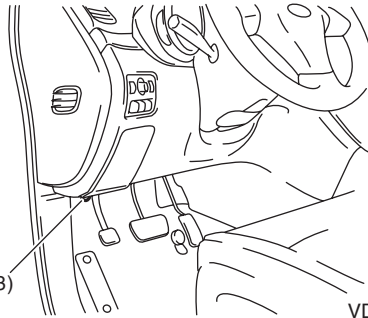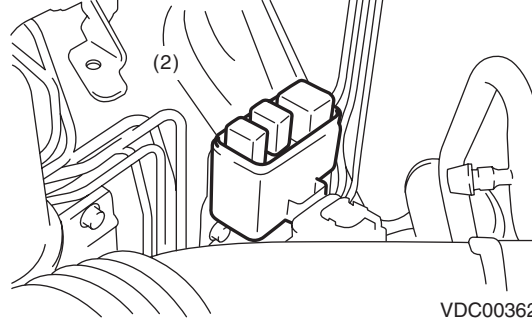
VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

 <p>VDC00360</p>	 <p>VDC00363</p>
 <p>VDC00235</p>	 <p>VDC00234</p>
 <p>VDC00361</p>	 <p>VDC00364</p>
 <p>VDC00362</p>	<p>SUBARU</p>

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

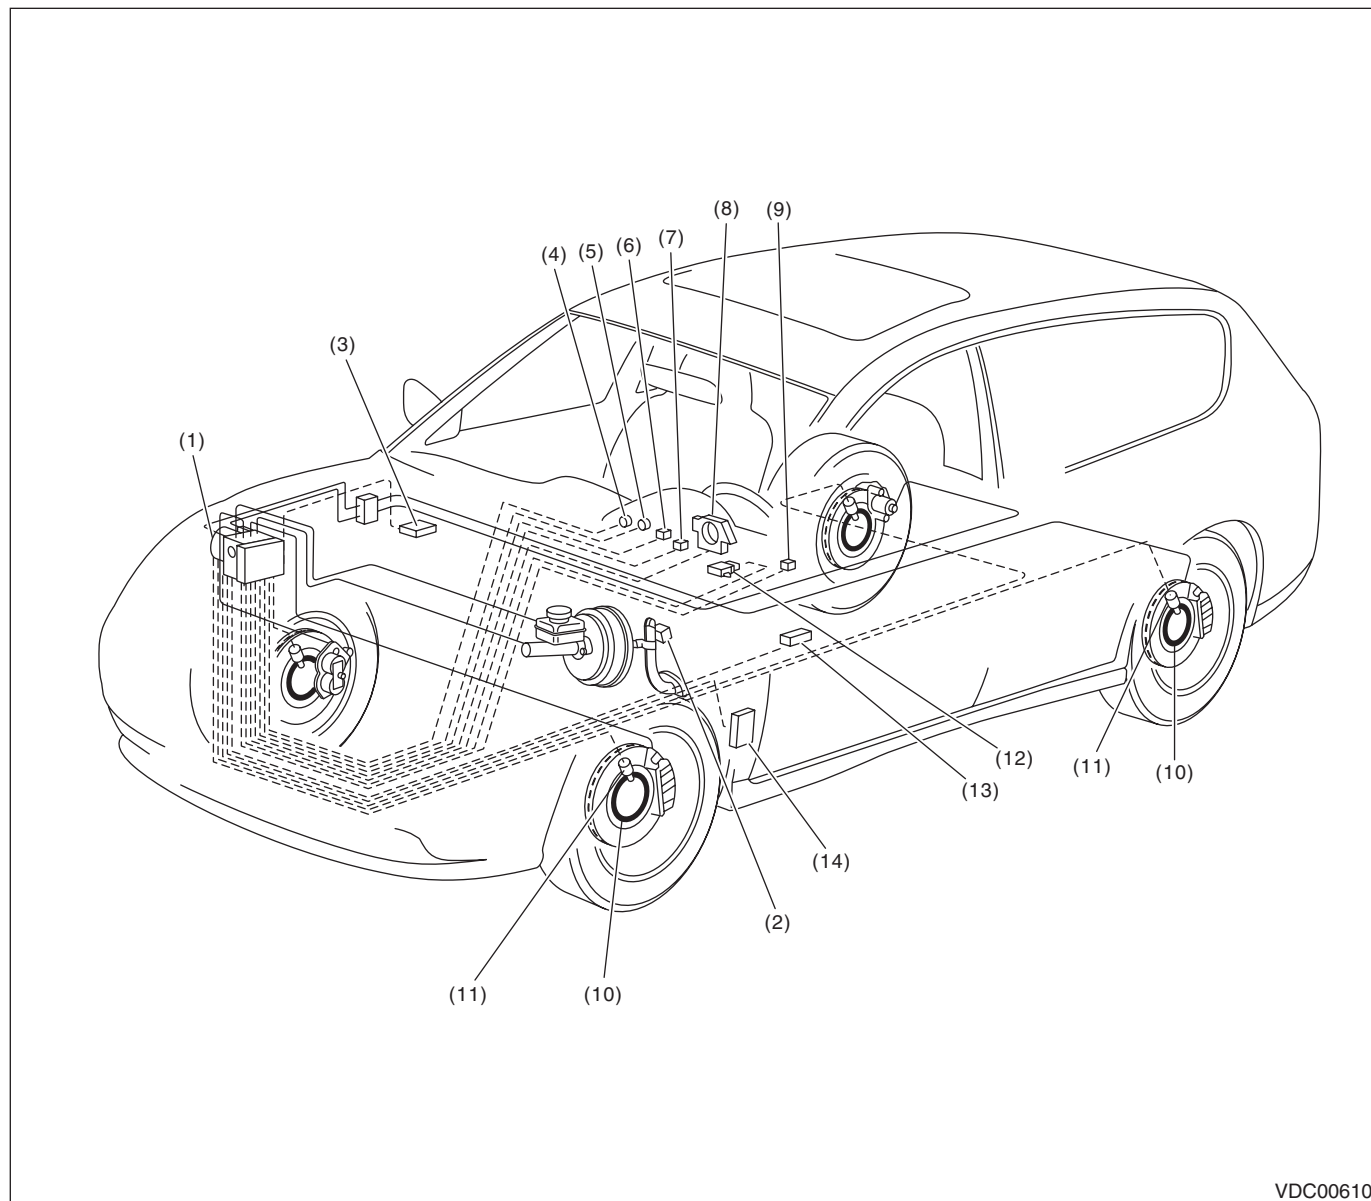2. VDC CONTROL MODULE IDENTIFICATION MARK W3



VDC00610

- | | | |
|---|---|--|
| (1) VDC control module & hydraulic control unit (VDCCM&H/U) | (6) VDC indicator light | (11) ABS wheel speed sensor |
| (2) Stop light switch | (7) VDC warning light and TCS OFF indicator light | (12) Yaw rate & lateral G sensor |
| (3) Engine control module (ECM) | (8) Steering angle sensor | (13) Data link connector |
| (4) Brake warning light (EBD warning light) | (9) TCS OFF switch | (14) Transmission control module (TCM) |
| (5) ABS warning light | (10) Magnetic encoder | |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

